

How to find your MAC address on popular devices

Apple TV

- Go to the main menu on your Apple TV, and select “Settings.”
- In the Settings Menu, select “About.”
- Here you can find your MAC Address listed as the “Wireless ID”

Xbox One

- Press the “Menu” button on your controller.
- Navigate to the Settings page.
- Select Network.
- Select Advanced Settings.
- MAC address will be listed next to Wireless MAC on the right hand side of the screen.

Playstation 4

- Turn on your Playstation 4 without any disk in the drive and wait for the menu to pop up.
- Navigate to the “Settings” icon (located on the far left).
- Select the “System” icon under the Settings menu.
- You will see your MAC address listed on this screen, containing letters and numbers in the format xx.xx.xx.xx.xx.xx.

Roku

- From the Home screen, press Up to make the Menu Bar appear.
- Select Settings.
- Select Player Info.

Amazon Fire Stick

- From the Fire TV or Fire TV Stick’s home screen, scroll down to “Settings”.
- Next, scroll to the right and select “System”.
- Next, Scroll down to and select “About”.
- Next, Scroll down to “Network”. Your Fire TV or Fire TV Stick’s IP Address will be listed on the first line on the right as a set of 4 numbers separated by periods. When entering this IP into an application that requests it, enter all 4 numbers including the periods.

Nintendo DS

- (Applies to: New Nintendo 3DS XL, Nintendo 3DS, Nintendo 3DS XL, Nintendo 2DS)

Nintendo Wii

- Go to the Wii Channel
- Select Wii Options (round button in the bottom left corner of the screen with the word Wii on it)
- Wii Settings (second page)
- Select Internet
- Select Console Information
- The first line will have the MAC Address

Playstation 3

- Start the PlayStation 3 with no disc inserted
- Select the System Settings icon and push the "X" button
- Select System Information and push the "X" button
- The third line will be the MAC Address

XBOX 360

- From the Xbox Dashboard, go to My Xbox (select the Xbox logo on the controller) > Settings > System Settings
- Select Network Settings
- Select Wired Network or Wireless Network based on your connection to the internet
- Once you are in the correct network tab, Select Configure Network > Additional Settings > Advanced Settings
- The 12 digit MAC address will be listed at the bottom of the screen

Chromecast

- Open the Chromecast app on your computer
- Click Settings
- Find the MAC address at the bottom of the window. The system's MAC address is located at the bottom-left corner of the Settings menu.

Amazon Echo

- Download the Amazon **Alexa** app to your phone or computer and sign in with your Amazon account.
- Connect to the wireless network transmitted by your Echo device.

- The wireless MAC address for your Echo can be found at the bottom of the Echo Setup screen in the Alexa app.

Google Home

- Plug in your Google Home
- Download and open the **Google Home** app on your phone.
- You should see your Google Home listed. Select it then press **Set Up**.
- Accept the prompt allowing your phone to connect to your Google Home.
- Answer the set up questions listed.
- Enter the location of your Google Home and select **Continue**.
- The wireless MAC address will be listed at the bottom right corner of the screen.

For printers print out the configuration page for your device.